cv	Description	Area	Value
1	Locomotive address	DCC: 1 - 127 Motorola: 1 - 80	3
2	Minimum speed (the speed from 0 until the locomotive is running at speed step 1)	1 - 63	1
3	Acceleration delay, 1 means every 5 milliseconds the actual motor speed is increased by 1. If the maximum motor speed is 200 (CV 5 = 50 or CV 94 = 200), then the acceleration rate from 0 to maximum speed is 1 second	0-255	10
4	Braking rate (time factor like CV 3)	0-255	10
5	Maximum speed (must be greater than CV 2)	1 - 63	39
6	Average speed (must be greater than CV 2 and less than CV 5)	1 - 63	13
7	Software version (The processor can be updated)	-	differently
8	Manufacturer identification decoder reset, values like CV 59	different	162
17 18	Long locomotive address 17 = Byte should be lower-case: byte 18 = Byte should be lower-case: byte	1 - 9999 192 - 231 0 - 255	2000 199 208
29	DCC standard configuration Value Bit 0=0 Normal direction of travel 0 Bit 0=1 Opposite direction of travel 1 Bit 1=0 14 speed steps 0 Bit 1=1 28 speed steps 2* Bit 2=0 DCC-only mode 0 Bit 3=1 Automatic analog/digital recognition 4* Bit 3=1 RailCom® turned off 0 Bit 4=0 Speed steps over CV 2, 5, and 6 0 Bit 4=1 Use the characteristic curve from CV 67 - 94 16 Bit 5=0 Short address (CV 1) 0 Bit 5=1 Long address (CV 17/18) 32	0-63	14
30	Error codes for function outputs, motor, and temperature monitoring: 1 = function output fault, 2 = motor fault, 4 = overload protection	0-7	0
59	Resetting to factory settings (also possible via CV8) 1 = CV 0 - 256, as well as CV257 - 512 (RailCom® Bank 7) 2 = CV 257 - 512 (RailCom Plus® Banks 5 & 6) 3 = CV 257 - 512 (extended function mapping banks 1 & 2) 4 = CV 257 - 512 (PMM modulation function cutout banks 3 & 4)	0-255 0 - 4	0
	4 = CV 257 - 512 (PWM modulation function outputs banks 3 & 4)		

Function assignments

F0	Directional lighting	F10	Engine room door open/close	F20	Sanding
F1	Sound on / off	F11	Cab window open/close	F21	braking test
F2	Horn; high-pitch	F12	Release compressed air	F22	Curve squeal sound on/off
F3	Horn, low-pitch	F13	Coupling / Uncoupling	F23	Rail clank sound on/off
F4	Fan	F14	station announcement 1	F24	Train lighting: the loco pushes
F5	Engineer greeting	F15	station announcement 2	F25	Train lighting: the loco pulls
F6	Pantograph up/down	F16	station announcement 3	F26	Volume control
F7	Battery main switch	F17	Conductors signal	F27	Sound fader (tunnel mode)
F8	Shunting mode	F18	Compressor		
F9	Cab door open/shut	F19	Radio		

56444-90-7001_2019

PIKO Spielwaren GmbH Lutherstr. 30 96515 Sonneberg GERMANY





#56444 PIKO multiprotocol SmartDecoder 4.1 PluX22 for Electrical locomotives BR 193 Vectron H0



NOTE: Detailed information on the PIKO SmartDecoder 4.1 Sound is available as a PDF file on our Webshop on the page of the respective item number. The file contains a full description of all functions and operating possibilities for the new SmartDecoder 4.1 Sound.

Description

The PIKO SmartDecoder 4.1 Sound PluX22 is a powerful and compact multiprotocol decoder that can be used with standard DCC, Selectrix, and Motorola digital systems as well as in DC or AC analog mode. The sound decoder is RailCom® and RailCom Plus® capable as well as mfx®-capable for AC models that are factory-equipped with PIKO SmartDecoder 4.1 Sound. The innovative PIKO SmartDecoder 4.1 Sound automatically recognizes the layout operating mode and has a wide range of program options for its additional functions.

These load regulated sound decoders operate on an 18.75 kHz frequency and are designed for standard DC motors as well as bell-shaped armature motors (i.e. Faulhaber, Maxon, Escap) that draw up to 1.2 A. Temporarily higher current levels up to 2 A are easily tolerated. The decoders are both RailCom® and RailCom Plus®-ready and recognize ABC automatic stop sections and ABC reduced speed sections. The motor voltage can be controlled either by a simple three-step motor speed curve, with minimum, midpoint and maximum voltage settings, or by a user-loadable speed curve, with 28 individually-set speed steps. The sound decoder provides two directional lighting outputs, as well as seven additional special function outputs. Slow-speed switching mode, with extended slow-speed range, along with three accelleration and braking rates, as well as the many vehicle sounds can be controlled via function keys.

Installing the PIKO SmartDecoder 4.1 Sound

Remove the jumper plug from your model's PluX22 interface. Insert the new sound decoder into the interface socket. Note that PIN 11 is missing on the new decoder. Please install the loudspeaker as shown in the graphic of the "Spare parts list". Check for crossed wires and short circuits before and after reinstalling the shell. Place the model on your programming track with programming mode activated on your DCC system. During programming or when reading the model's DCC address, a small amount of current will flow through the model, which does not affect the decoder; even in the event of a short circuit.

Special functions A1 to A7

The decoder's special function outputs A1 to A7 can only be activated if the desired functions are already connected to the model's PluX22 interface or if solder pads are available for the special function outputs on the main circuit board.

A short circuit in the motor, lighting, pick-up wiper, or wheelsets can destroy the decoder as well as the electronics of the model!

First-time use of the decoder (state of delivery)

Enter address 3 on your DCC control system. Depending on the data format used to address the sound decoder, the locomotive runs in DCC mode with 28 speed steps or in Motorola mode. When using a RailCom Plus®-enabled DCC system or with an mfx®-capable DCC system (for this use decoder 56401), the decoder is recognized in a few seconds and can be operated immediately. If the decoder is used on a conventional analog layout, it can be controlled with a DC or AC power pack. The decoder will automatically detect the layout's operating mode.

NOTE: In DC analog mode, your model will only start at a higher voltage than what you may accustomed to when operating analog models. You will need to turn the throttle up for the model to start operating.

Function outputs in analog mode

It is possible to program the decoder so that function keys F0 - F12 (as they are assigned in the function mapping) can also be activated in analog mode. To do this, CVs 13 & 14 must first be programmed with a DCC central control unit. The corresponding values can be found in the CV table of the detailed operating instructions. The light function F0 is factory-set to "on."

Motorola

The sound decoder has 3 Motorola addresses to activate functions F1 - F12 on a Motorola-format DCC system.

Configuration of CVs

In addition to the decoder address, the indexed CVs of a locomotive decoder are the most important CVs. These are the CVs 29, 50 and 51 in the PIKO SmartDecoder 4.1 Sound. As a rule, an indexed CV contains various basic settings of a decoder, such as reversing the direction of travel. CV calculation examples can be found in the detailed operating instructions.

RailCom®, RailCom Plus®

In the sound decoder, CV29 (RailCom®) can be turned on or off via bit 3. If RailCom Plus® is turned on, the decoder will be automatically recognized by a RailCom Plus®-enabled DCC control system (i.e. PIKO SmartControl) and a locomotive icon, decoder name, and its special function icons will appear on the control system's screen. With RailCom Plus® technology, no locomotive data has to be stored in the DCC central control unit and no locomotive addresses have to be programmed into the decoder.

mfx®

The PIKO SmartDecoder 4.1 Sound, factory-installed in PIKO AC models, is mfx®-capable. If your DCC control system uses the mfx® format, then the decoder is automatically recognized and is assigned its locomotive symbol, decoder address, and its special function symbols. With mfx® technology, no locomotive data has to be stored in the DCC central control unit and no locomotive addresses have to be programmed into the sound decoder.

Braking

The sound decoder understands the following braking methods: Märklin braking section (brakes with analog DC voltage)

DCC braking function

ABC (Automatic Brake Control) braking section

The sound decoder can stop the model with two adjustable braking distances that are accurate down to the centimeter. More information on "braking behavior" can be found in the detailed operating instructions for PIKO SmartDecoder 4.1 Sound.

Function outputs

A comprehensive description of all options related to the function outputs can be found in the detailed operating instructions.

Simple and extended function mapping

With **simple function mapping**, adjustable functions like lighting, special function outputs, switching (shunting) mode, and acceleration and braking can be freely assigned to function keys F0 to F12 of the DCC central control unit. For more information, refer to the CV table at the end of this manual, as well as the detailed user quide.

Smoke generator control

A smoke generator can be connected to outputs A1 to A7 which are load-sensitive and react to the model's speed. For further information, please refer to the detailed operating instructions.

Electric coupler control

PIKO electric couplers are operated by tiny copper wire resistance wires which heat up when the decoder sends current through them. The heat causes the wires to expand, causing the coupler hook to move to the uncoupled position. The model can then back away from the car. The model's sound decoder can be programmed to automatically shut off current to the coupler mechanism after a certain time period, without need to press another key.

Switching (shunting) scenario, remote coupling/uncoupling

If your layout has remote electric uncouplers installed, you can program the locomotive decoder to perform a switching scenario like the following:

- 1) The locomotive runs in one direction for a certain distance.
- 2) The locomotive stops and reverses direction.
- 3) The locomotive uncouples and moves back from the uncoupled car for a certain distance.
- 4) The locomotive stops, and resumes switching..

Servo control

The sound decoder can control up to three servo motors via outputs A6, A7.

The use of a servo with the decoder requires electronics expertise.

Further information can be found in the detailed operating instructions.

Information on wiring servos to the function outputs can be found in the FAQ section of the PIKO Webshop by clicking on the link "Questions about the digital system." Scroll down to the "H0" category and click on the title "Servo connection to SUSI or solder pads at the PIKO SmartDecoder 4.1".

Factory reset

CAUTION! When the decoder is reset, all factory settings are erased! Only perform a reset if it is absolutely necessary. If you nonetheless have to reset the decoder remember that functions programmed at the factory may no longer function and you must reprogram the individual Function Mapping (see FAQ)

To restore the decoder back to factory settings, use CV8 for DCC programming and CV59 in Motorola programming.

To avoid having to re-enter all programming after a reset, you can select beforehand which areas of the decoder programming should be reset to factory values.

To restore the basic functions of the decoder, enter a value of 1 in the Reset CV (8 or 59).

Information on extended reset can be found in the detailed operating instructions.

Märklin and mfx® are registered trademarks of Gebr. Märklin & Cie. GmbH, Göppingen Motorola is a registered trademark of Motorola Inc. Tempe, (Phoenix) Arizona / USA RailComPlus® is a registered trademark of Lenz Elektronik GmbH Selectrix® is a registered trademark of Gebr. Märklin & Cie. GmbH, Göppingen

NOTE: This product is not a toy and is not suitable for children under the age of 14. Any liability for damage of any kind caused by improper use or failure to observe these instructions is excluded.

Service:

Internet: www.piko.de E-Mail:info@piko.de Hotline: Di + Do 16-18 Uhr

In the event of a defective decoder, please return the decoder module to PIKO along with proof of purchase, the decoder address, and a short description of the problem.

Warranty Statement

Each decoder module is fully tested before shipment. Nevertheless, should a malfunction occur within the 2-year warranty period, we will repair the module free of charge on presentation of the proof of purchase. This warranty is voided if the unit has been damaged by improper use. Please note that, according to the German Electromagnetic Compatibility Law (EMV-Gesetz), the decoder module may only be used inside models bearing the CE mark.

Product subject to changes. All rights reserved. Printed 05/2019. Copy and duplication of this text are permissible only with the permission of the publisher.

For information on extended function mapping, refer to the detailed operating instructions.